
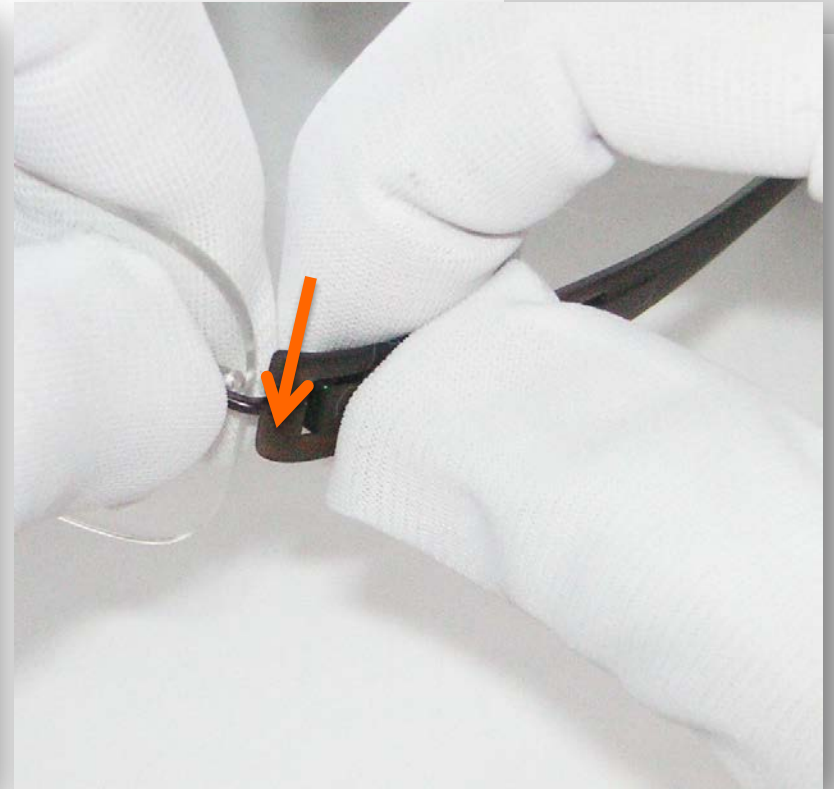


# SPX Connection Technical Instructions

# Inclination

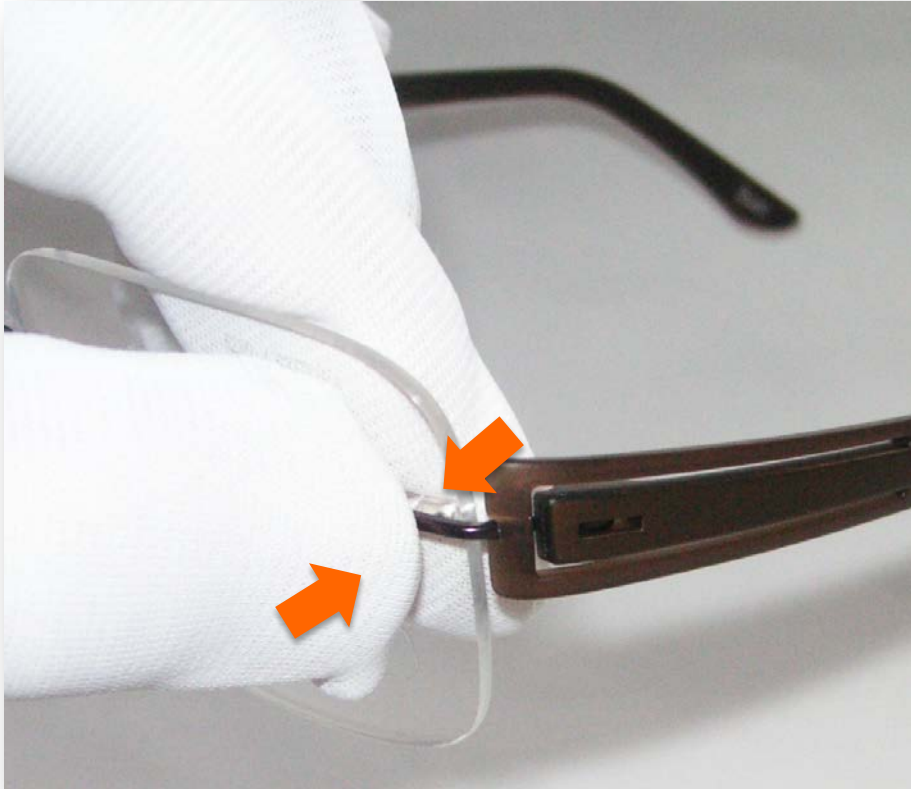

1. Hold lens fixation firmly.
2. Open temple completely.


3. Enclose hinge and temple edge firmly and adjust inclination on titanium side as shown.

# Temple Opening

Reduce



Enlarge

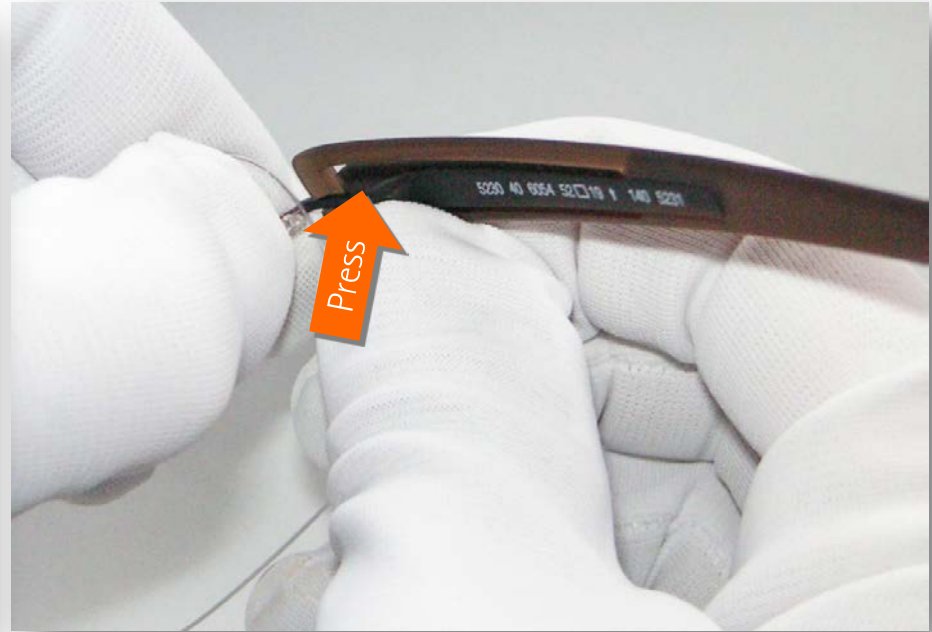

# Temple Disassembly



1. Place temple removal tool at hinge, select necessary diameter depending on distance between temple and lens.



2. Close temple and press it through behind round part of temple removal tool.
3. Temple will get loose once clicked.

# Greasing the Hinge




After cleaning, grease inside loop of hinge with high precision lubricant Teflon (P 0030) and mount temple.

# Temple Assembly



1. Place side part exactly at the holes in the SPX temple.

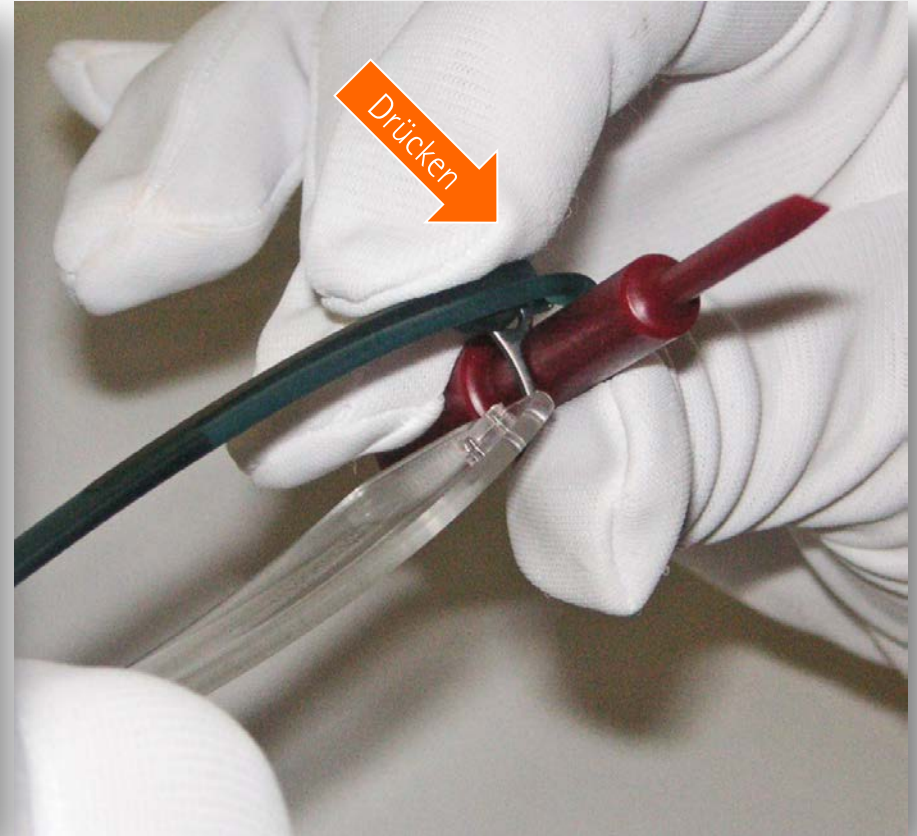

2. Press temple into side part using round part of temple removal tool.

## Adjusting of Temple



Curve temple using large movements .

Metal needle inside temple enables cold adjusting of temple ends.

If necessary, slight heating to a maximum of 70°C is possible but never bend temple!