

Silhouette

AC 400 INCLINATION LEVER – USE

P00001104000000



Hold the lens fixation by hand (fullrim or nylon) or with mounting pliers (rimless frames). Close the temple by approx 30°. Place inclination lever on side part and hinge and adjust inclination angle as required.