


Silhouette[®]

Titan Design NYLOR Technical Instructions


1. Temple Disassembly

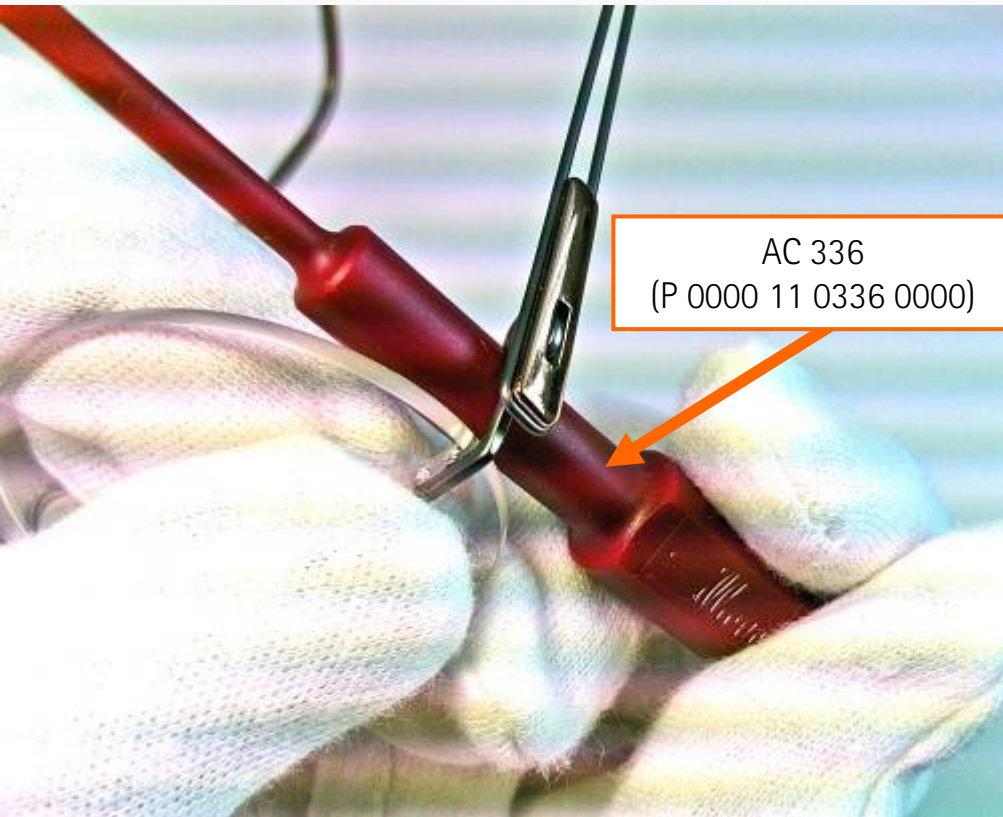

Use red disassembly tool. Place it as close as possible to the inside hinge.

Fold temple and press together directly behind the disassembly tool.

2. Temple Assembly

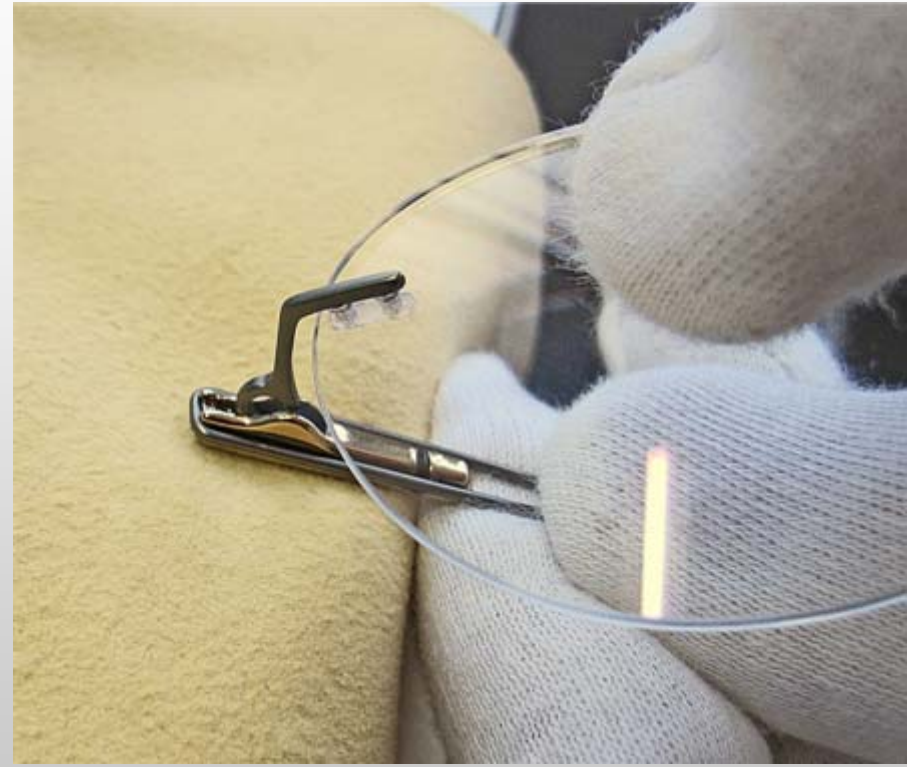


1. Support temple firmly by placing it on a safe table edge.

Note: grease hinge with teflon

2. Place opening of hook at the exact position of the decoration part opening.



3. Temple Assembly

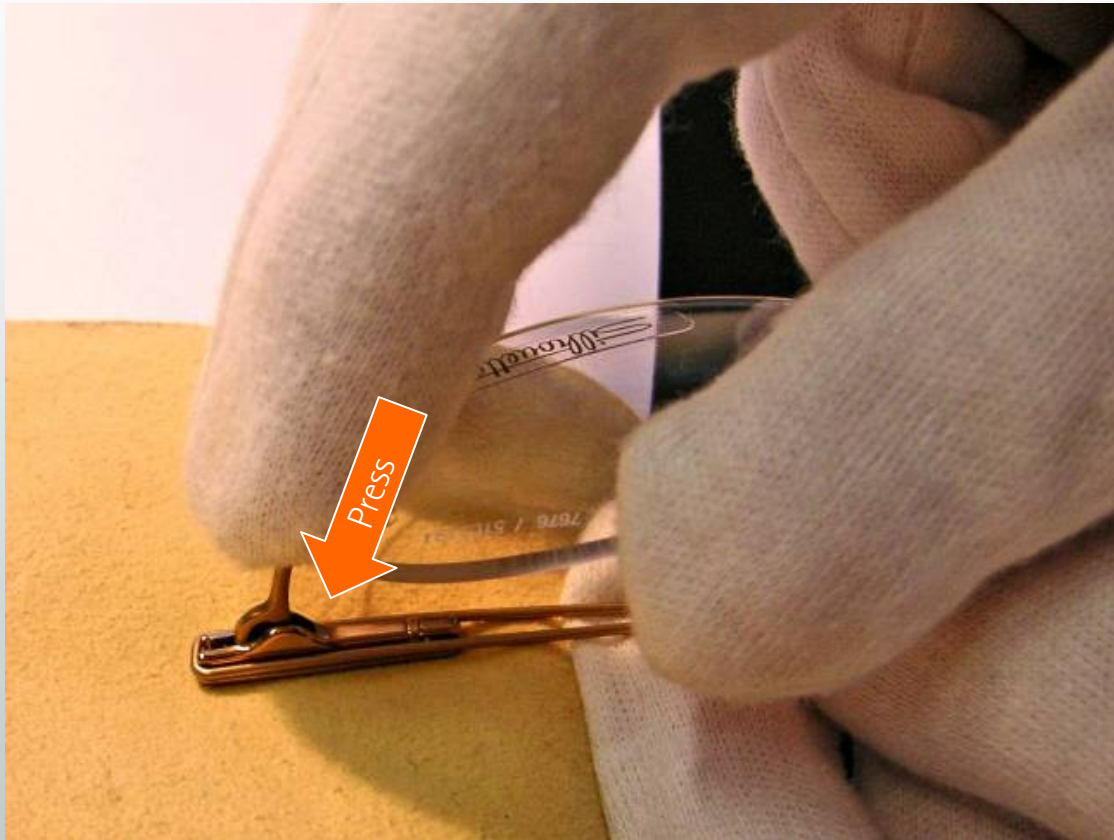

Press hook of the hinge top down.

Note: Certain levels of pressure may only affect the table edge not the lens fixation or the decoration part

4. Inclination

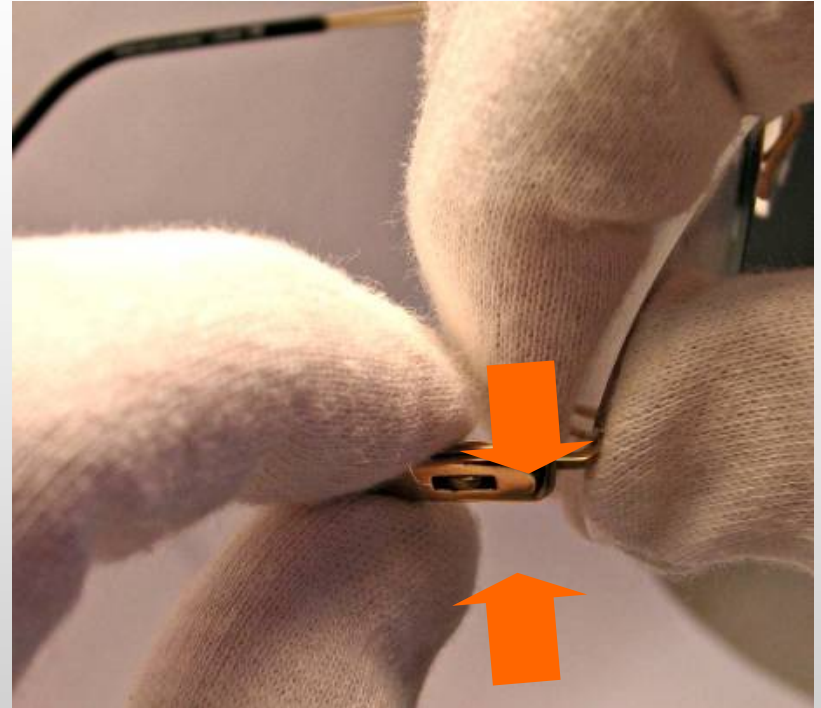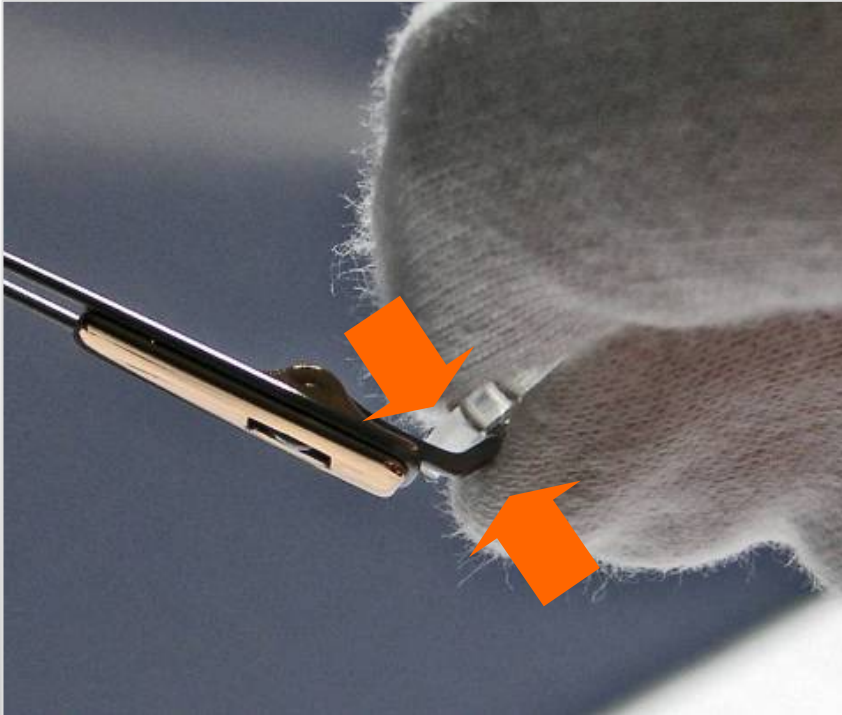

1. Hold lens fixation firmly.

Use universal mounting plier as support
in case finger pressure is too weak.

2. Open temple entirely


3. Incline trim area

4. Hold temple with decoration part firmly


Note: It is possible to incline without temple disassembling due to a thinner titanium trim.
Use the thicker cross section of the temples and the groove inside the temples.

5. Temple Opening

Reduce

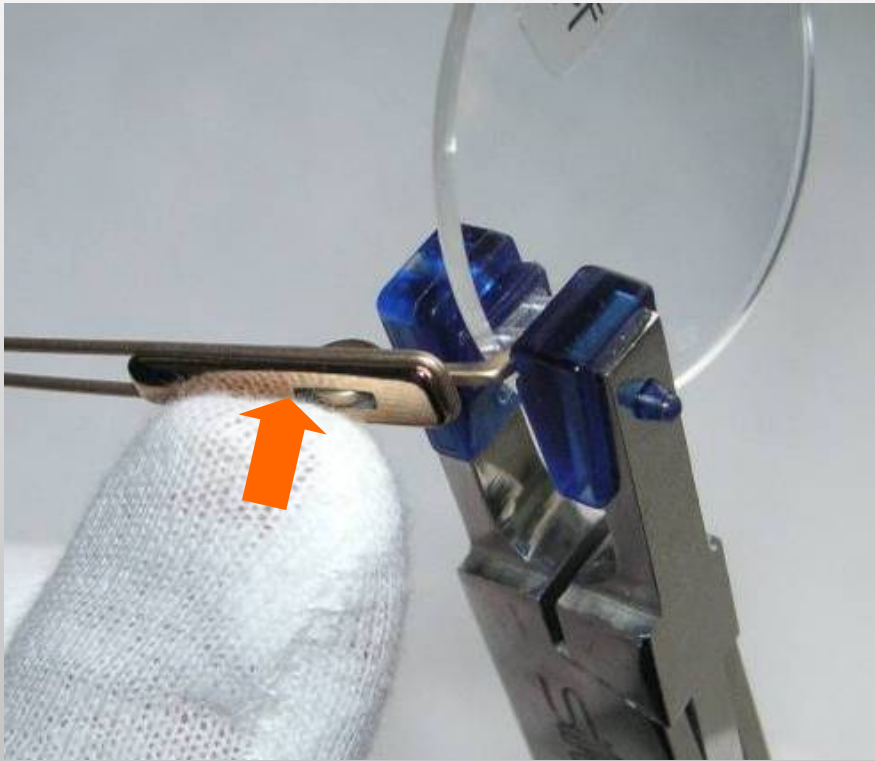

Enlarge

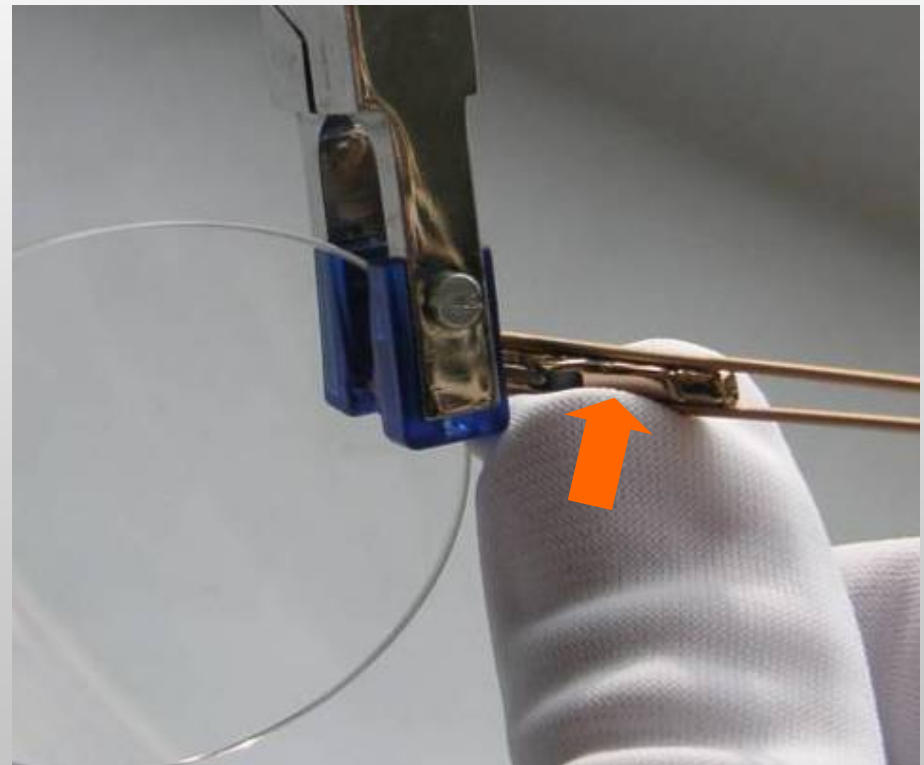


6. Temple Shortening

1.



Pull off temple end

2.

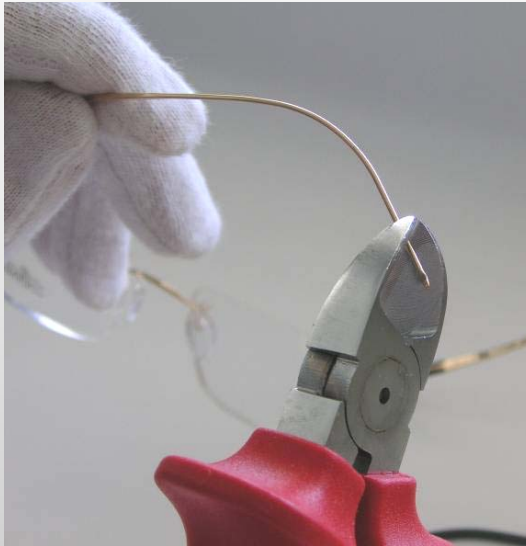


Shorten metal temple
by cutting it with
diagonal cutter

3.



Rasp sharp edges until
they are rounder out

7. Fixing Temple End

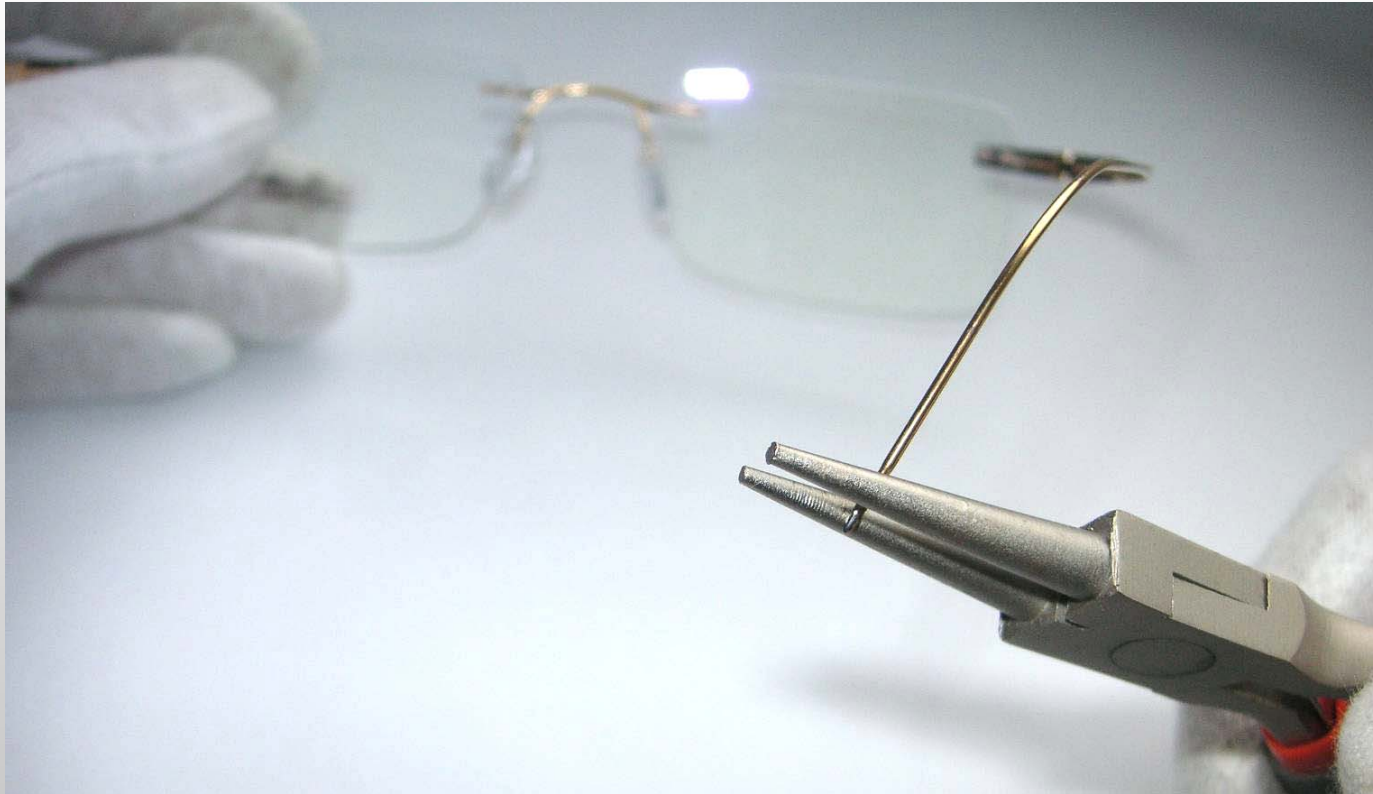

Squeeze metal inlay with round pliers at the very end.

Attach temple end firmly to avoid slipping.

Note: If necessary the temple end can be glued with Loctite 406