


Silhouette®

AUTHENTIC EYEWEAR. SINCE 1964.

TITAN NEW WAVE



Integrated Nylor Thread Technology

Fixation of Nylon Thread

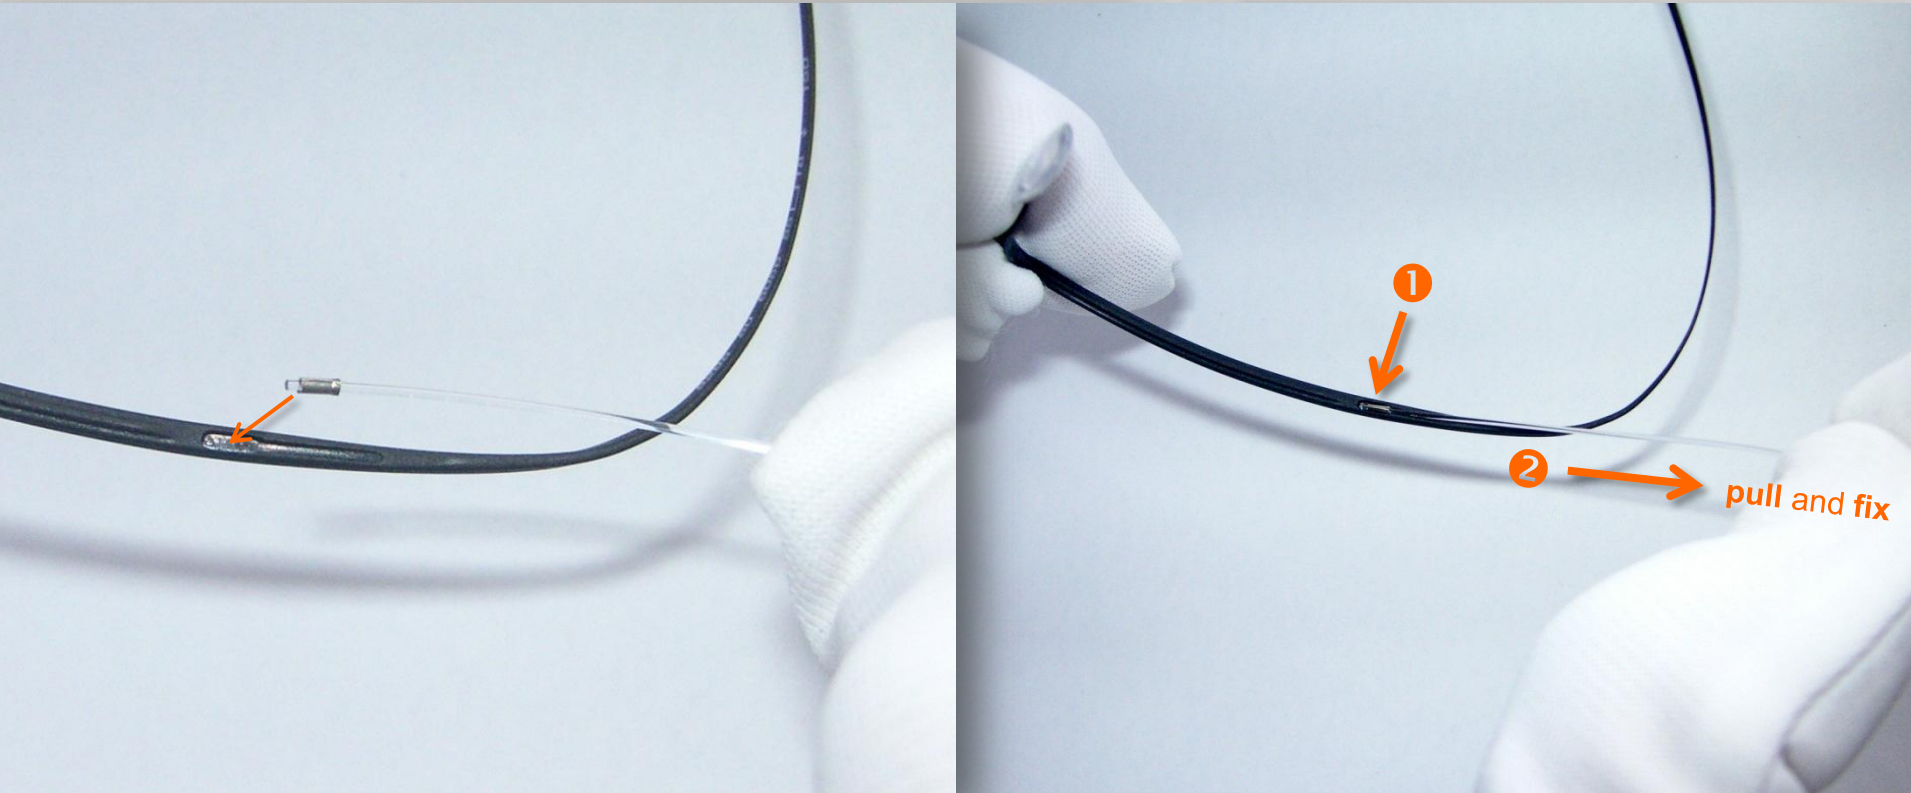


- Use the enclosed nylon thread if using a different shape.
- Cut nylon thread in half and secure on frame.
- Nylon thread available as spare part P 0000 99 0017 2002.

Detaching the Nylon Thread

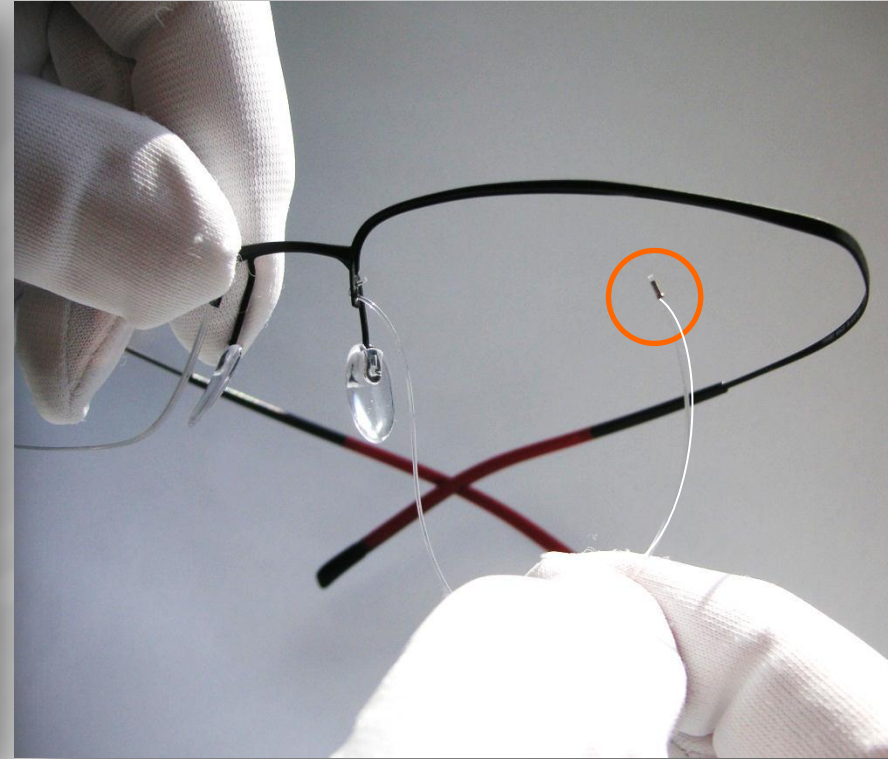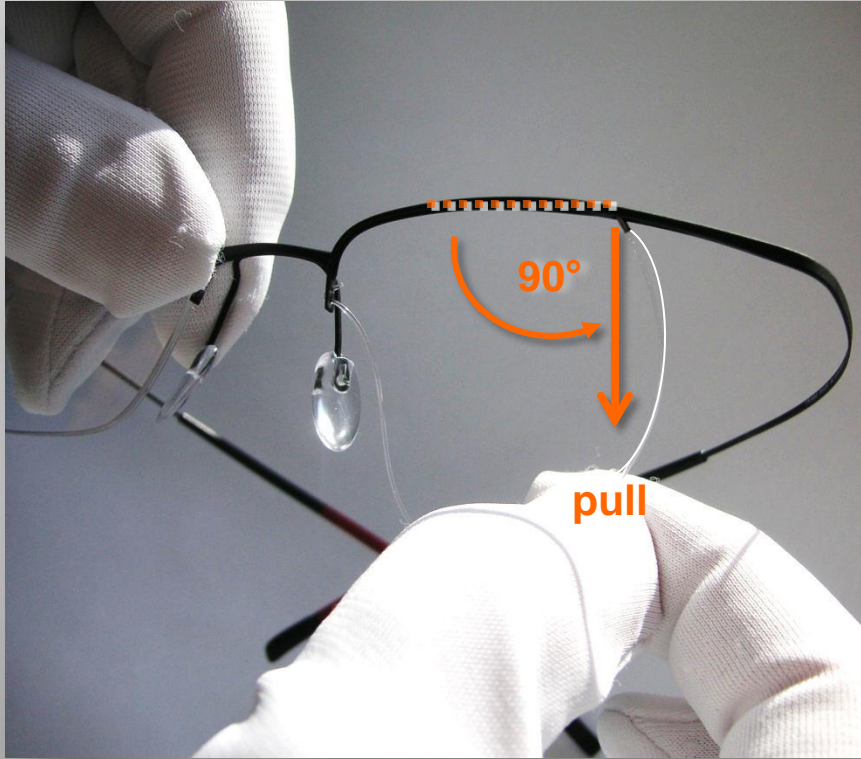


Threading of Nylor Thread


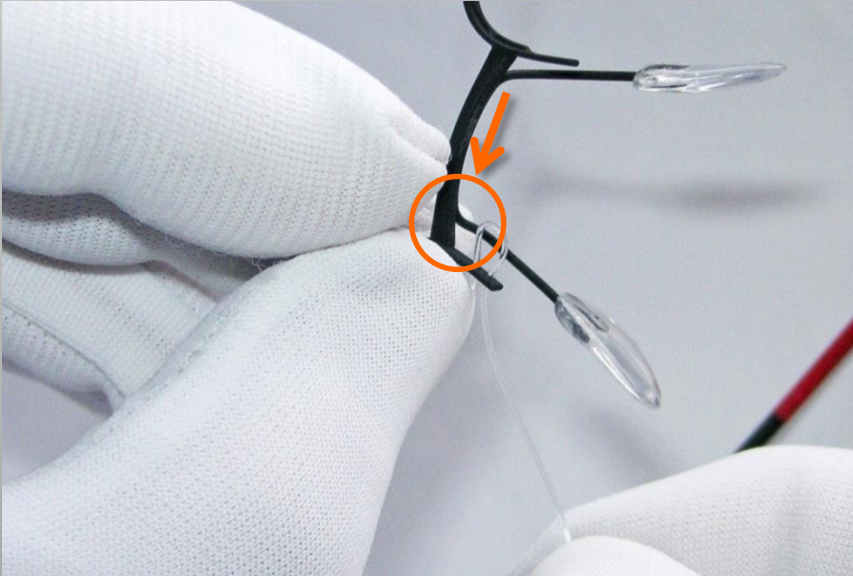


Cut nylor thread to required size and thread through.


Groove

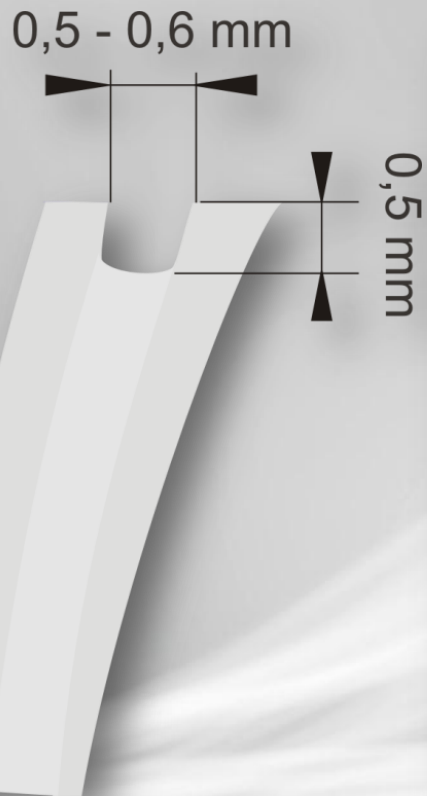


Inserting Lenses

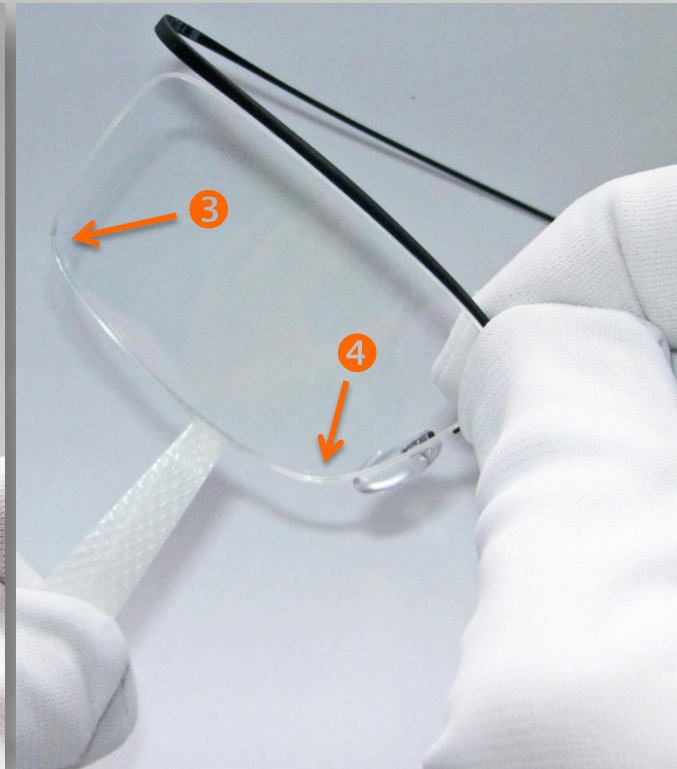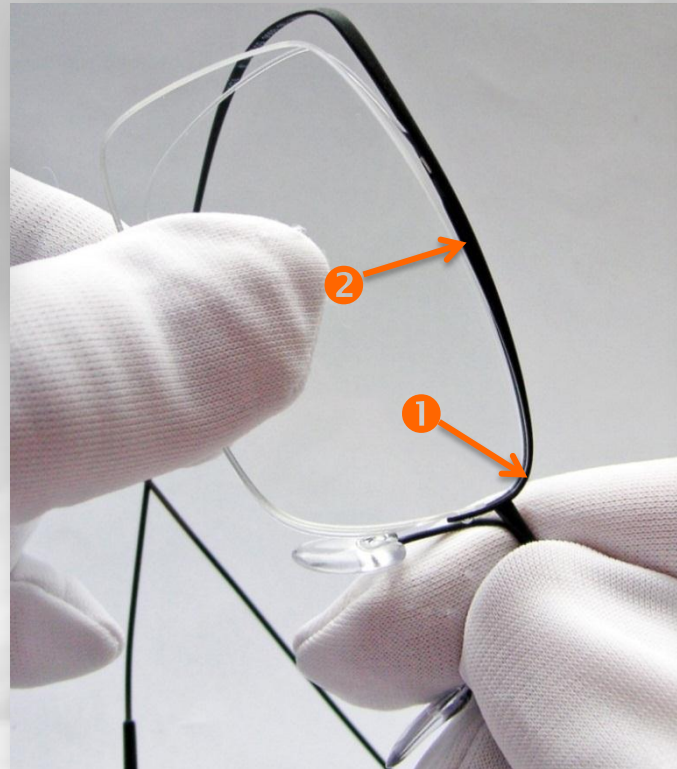

Inclination




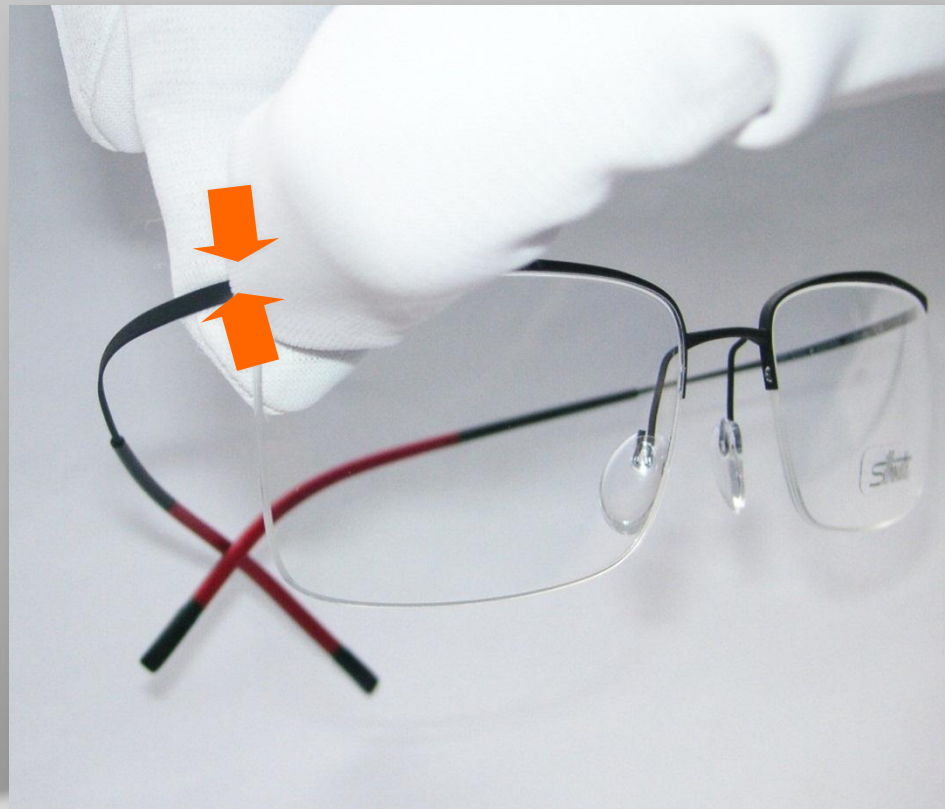


1. Hold upper bar firmly in area of side part.

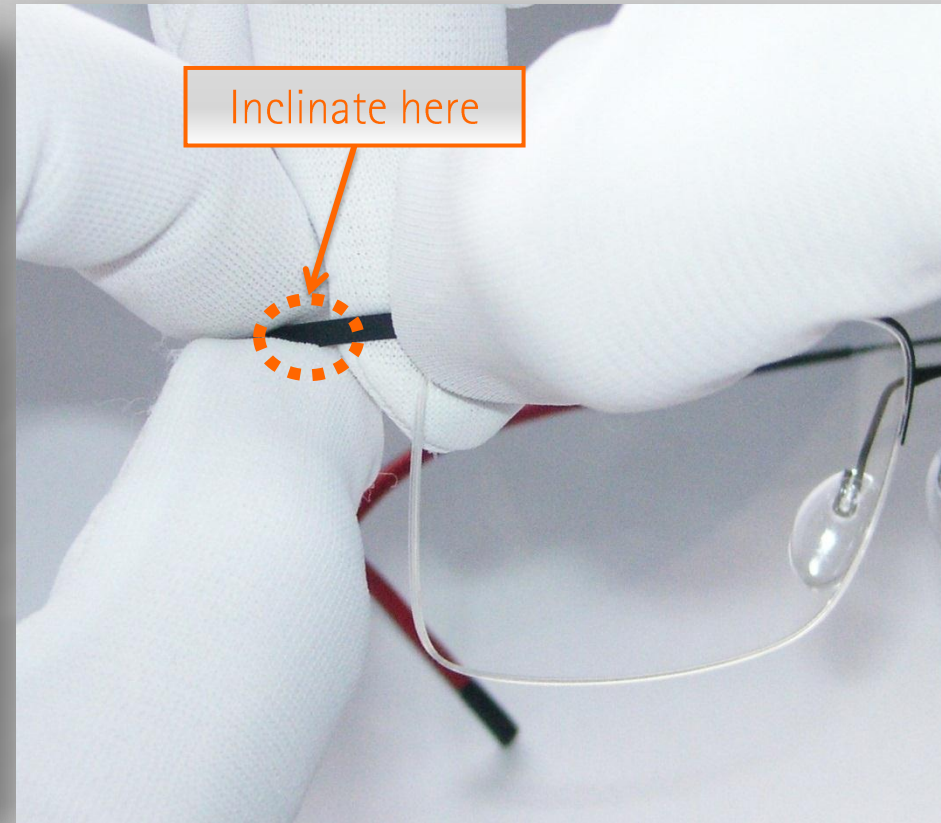

2. Adjust inclination in area of side part carefully in small increments.

Temple Shortening

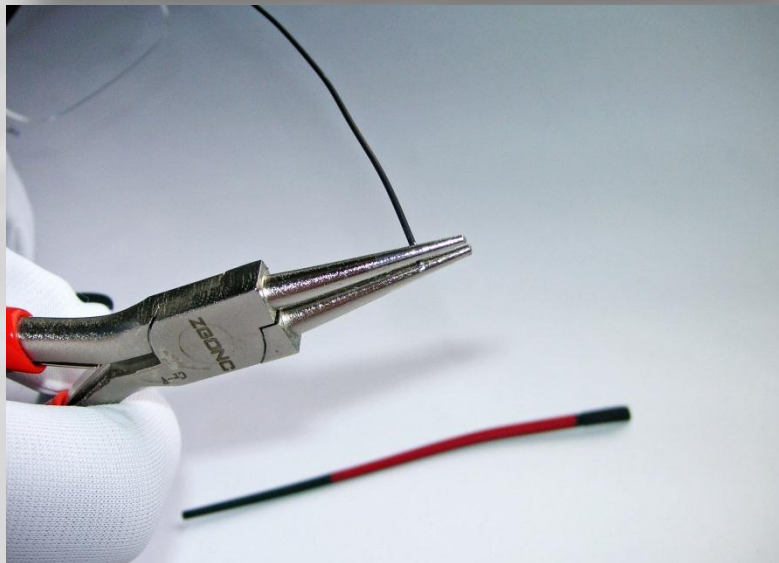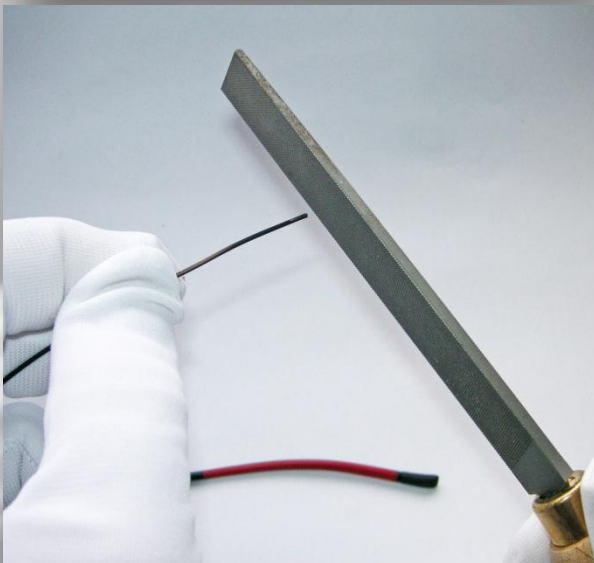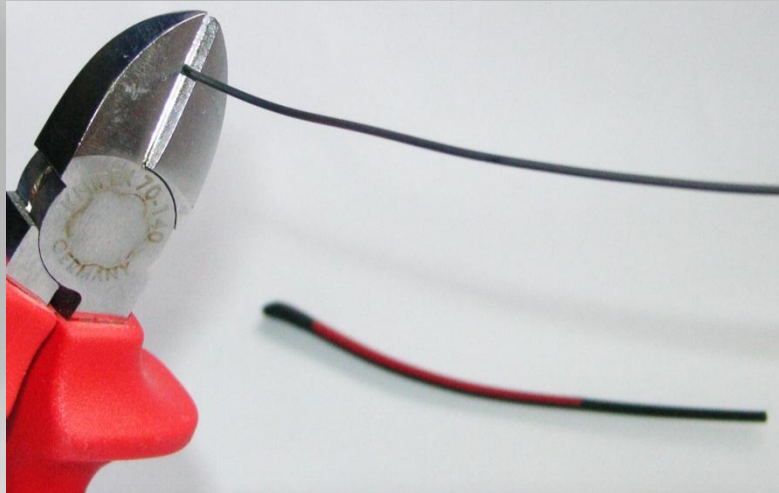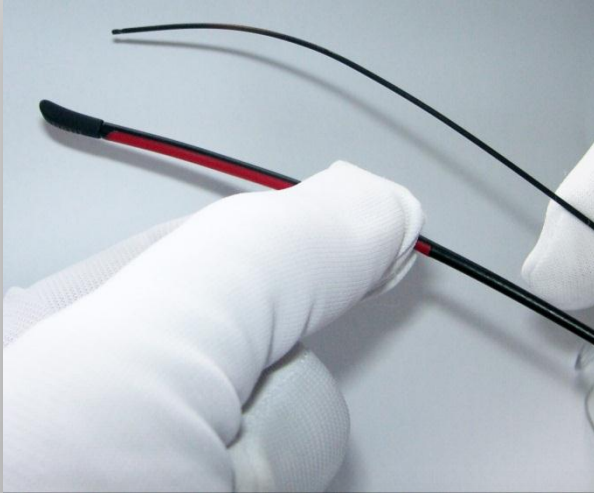

Squeeze metal inlay at the end with round pliers to secure temple end.

Adjusting Temple End



- Curve temple in large motions.
- Metal inlay inside temple enables cold adjustment of temple end.
- Do not bend!