

Wes Gordon Sun



Wes Gordon





Glazing | Wes Gordon


- No RX- glazing possible due to lens design
- Exchange plano lenses is no problem with Silhouette plier blue and BLS 58, BLS 40



BLS 58 STANDARD	BLS 40 "soft"
Standard Glazing	only TMA MUST / TNG
2,0 - 6,5 mm	2,0 - 6,5 mm
Π	Π
Ø 1,4 mm	⊘1,4 mm



Inclination | Wes Gordon

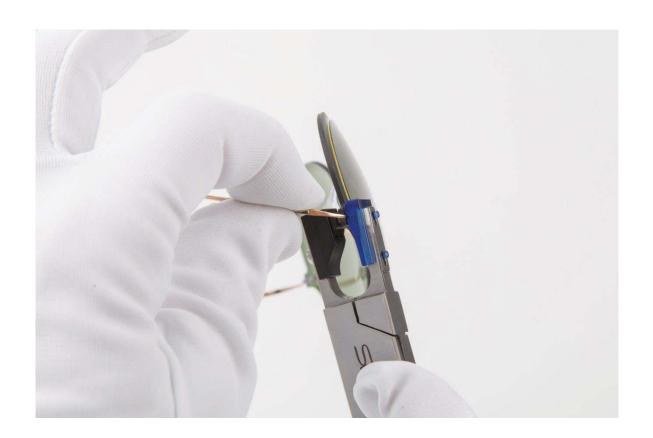



hold the glasses with a plier and bend the temple in the requested direction



Temple opening | Wes Gordon

Enlarge

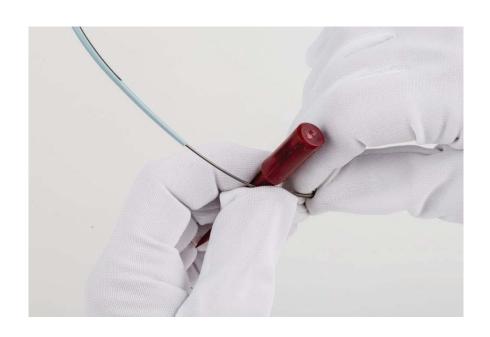


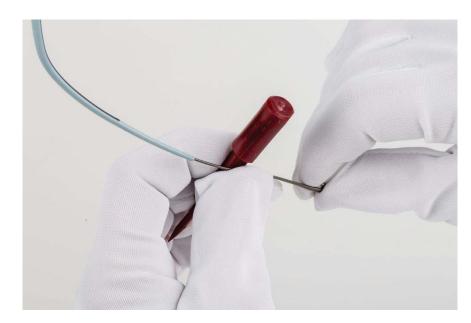



Temple opening | Wes Gordon


Reduce

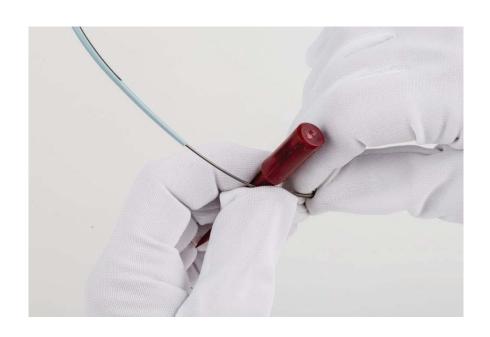





Care | Please don't do it like this!

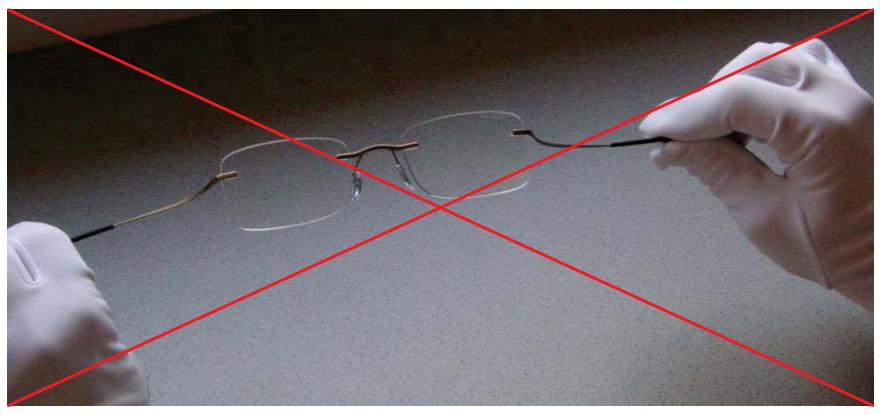

- 1. In no case titanium temple may be overstretched or twisted!
- 2. Microscopic ruptures might cause temple breakages.