


*Silhouette*<sup>®</sup>


AUTHENTIC EYEWEAR. SINCE 1964.

Titan Contour  
Technical Instructions

# Inclination

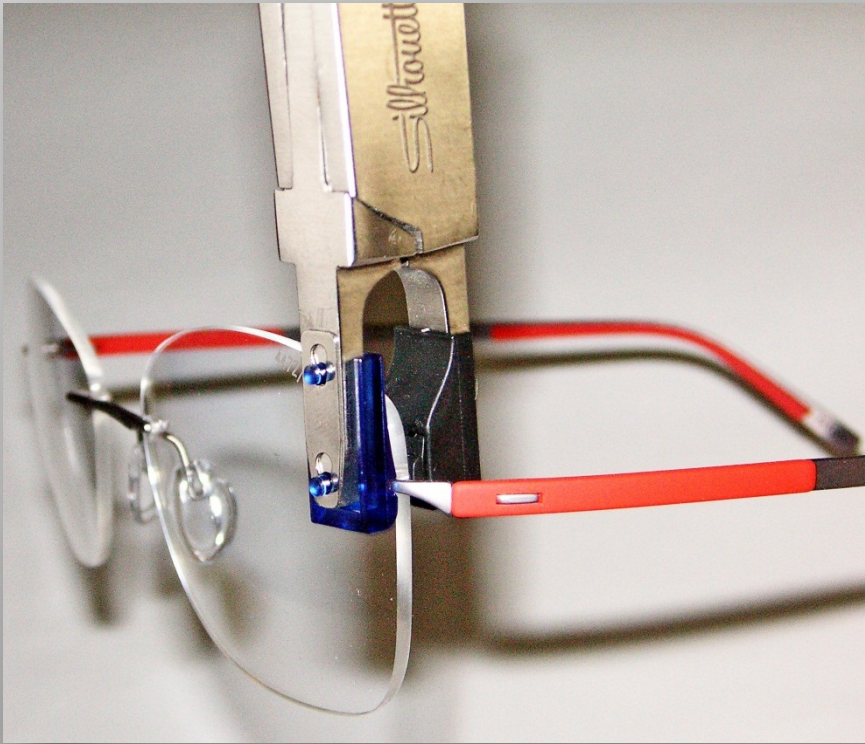

1. Hold lens fixation firmly with mounting pliers.
2. Open temple completely.

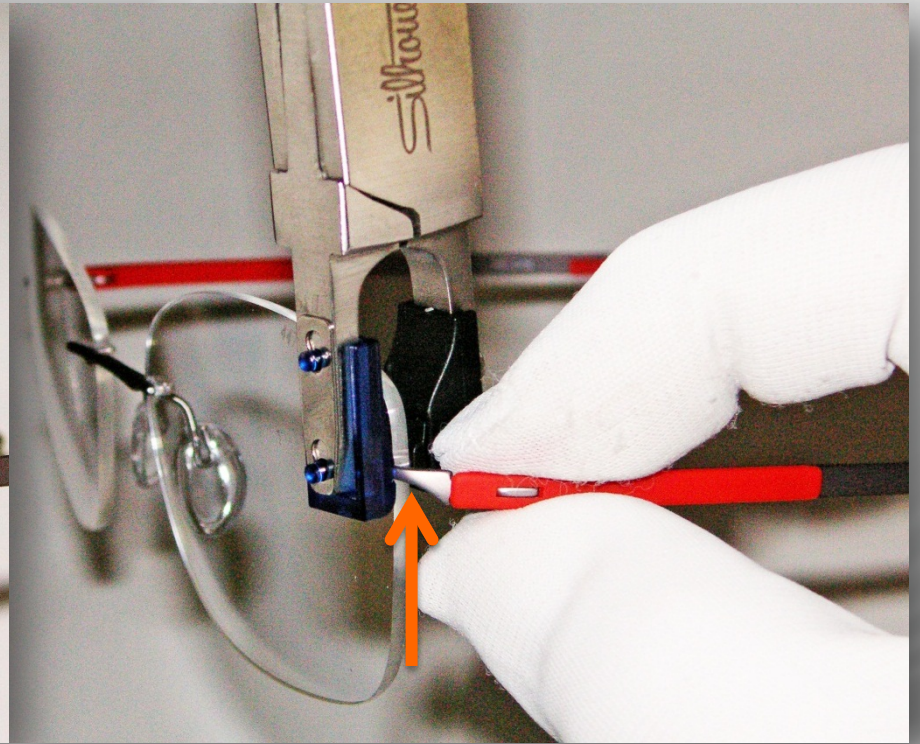


3. Enclose temple edge tightly and adjust inclination on titanium side part in direction shown.



# Adjust Temple Opening

Reduce

Enlarge

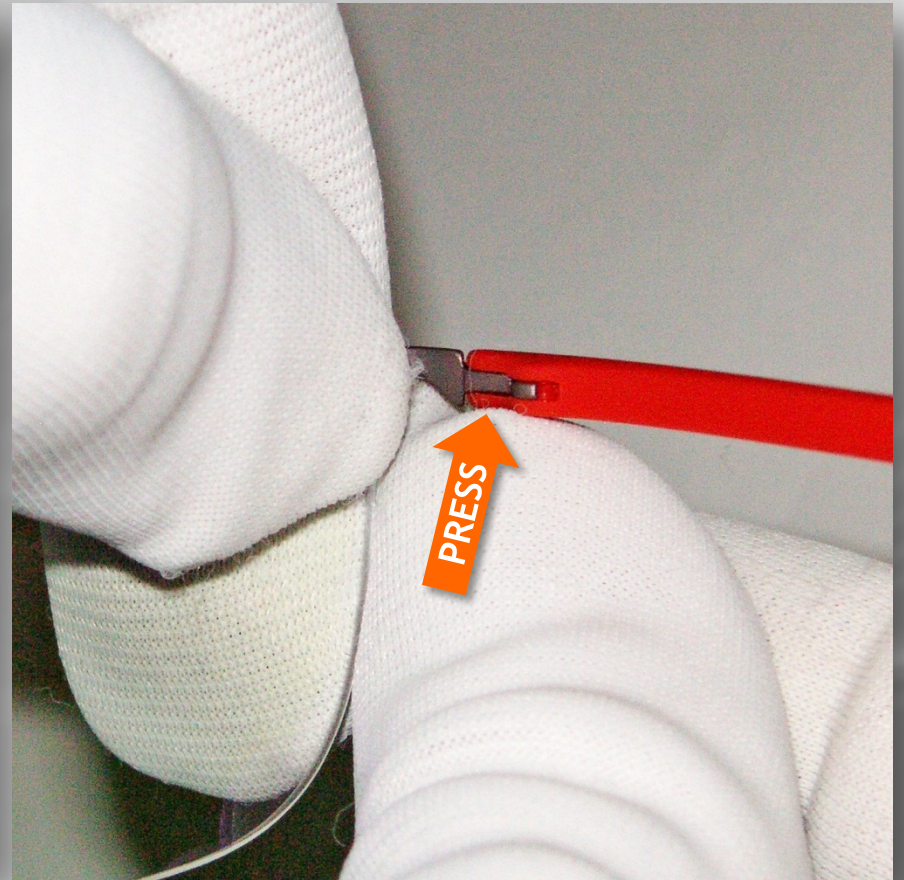

# Temple Disassembly

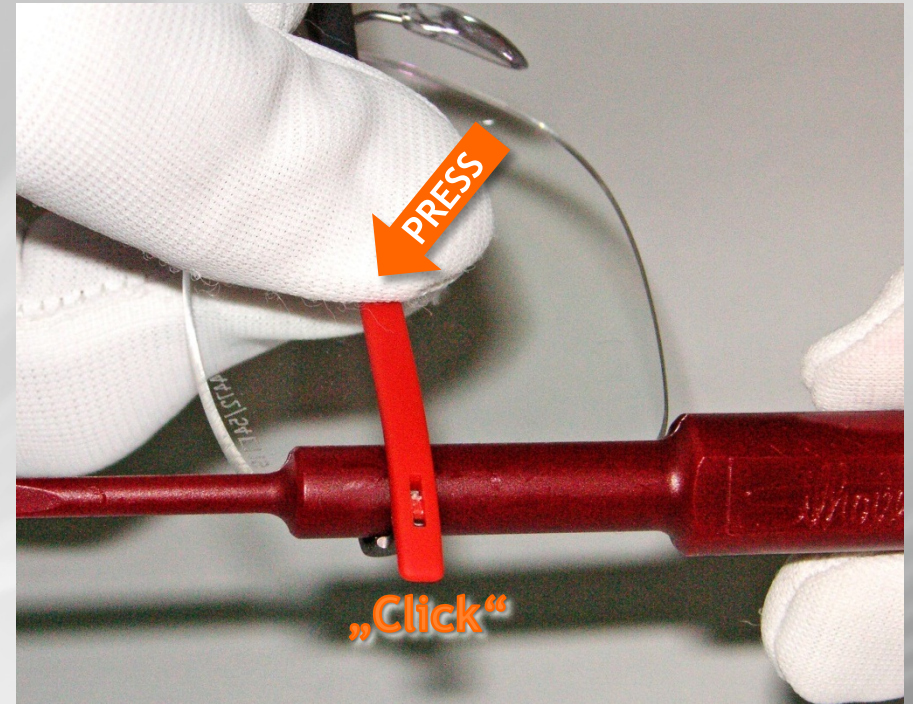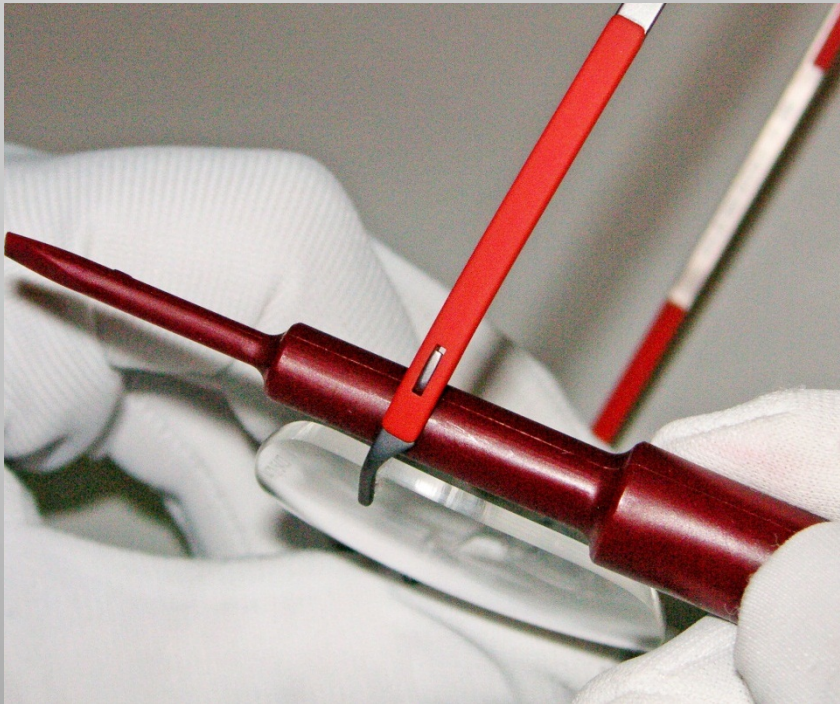


1. Place disassembly tool at hinge. Select correct diameter of round stick according to distance between temple and lens.
2. Close temple and press behind round stick.
3. Temple will loosen with a click.

# Grease hinge with Teflon




After cleaning grease inside loop of hinge with Teflon high precision lubricant out of mounting box (P 0033), then mount lenses.

# Temple Assembly

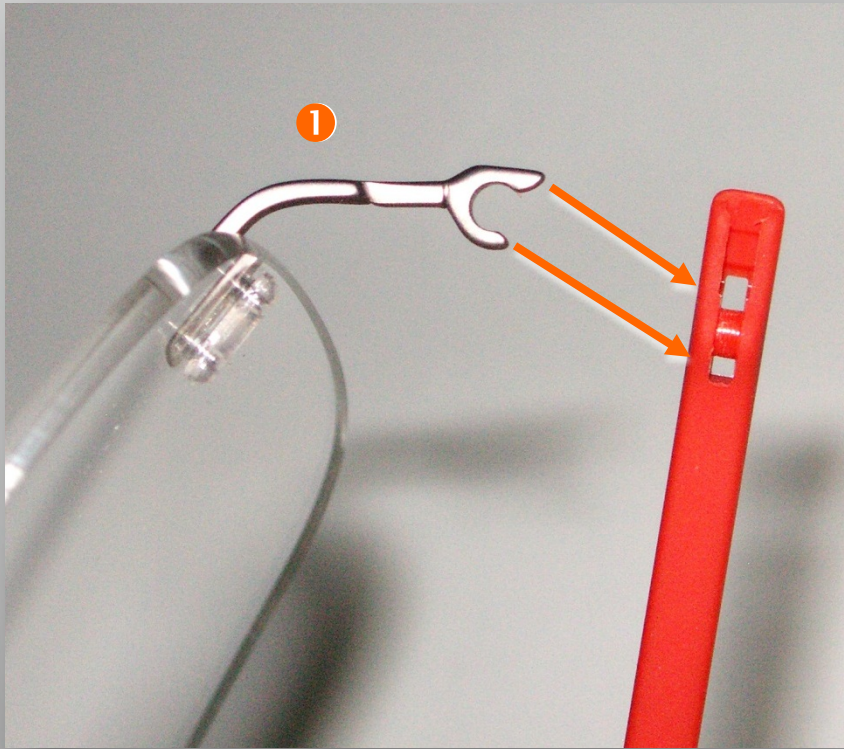


1. Place side part at temple holes.

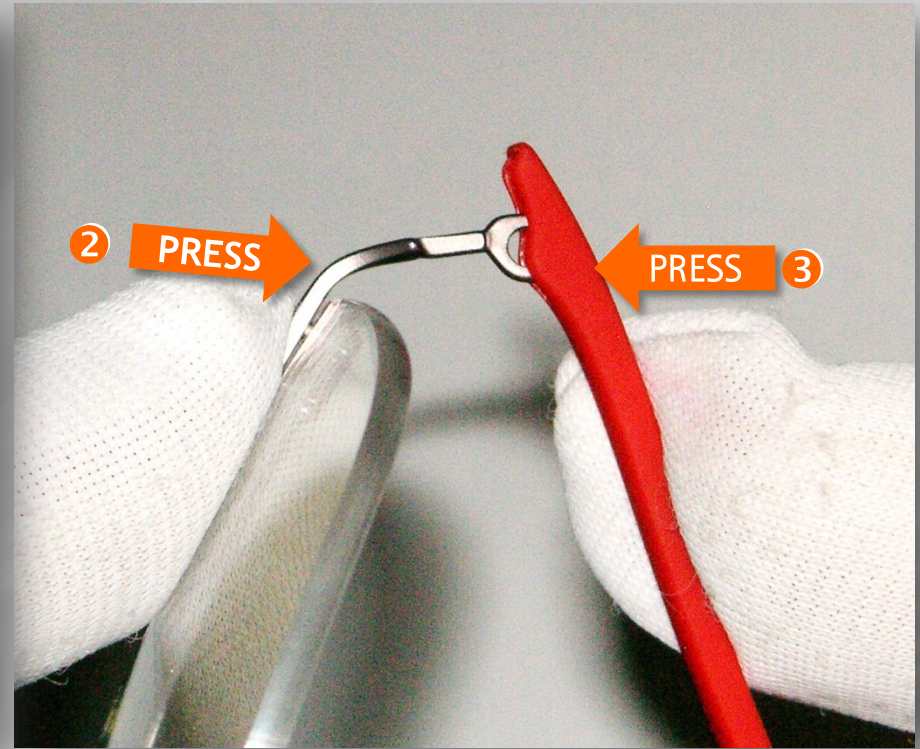

2. Apply counter pressure on side part.

3. Press temple into side part.

# Adjust Temple End

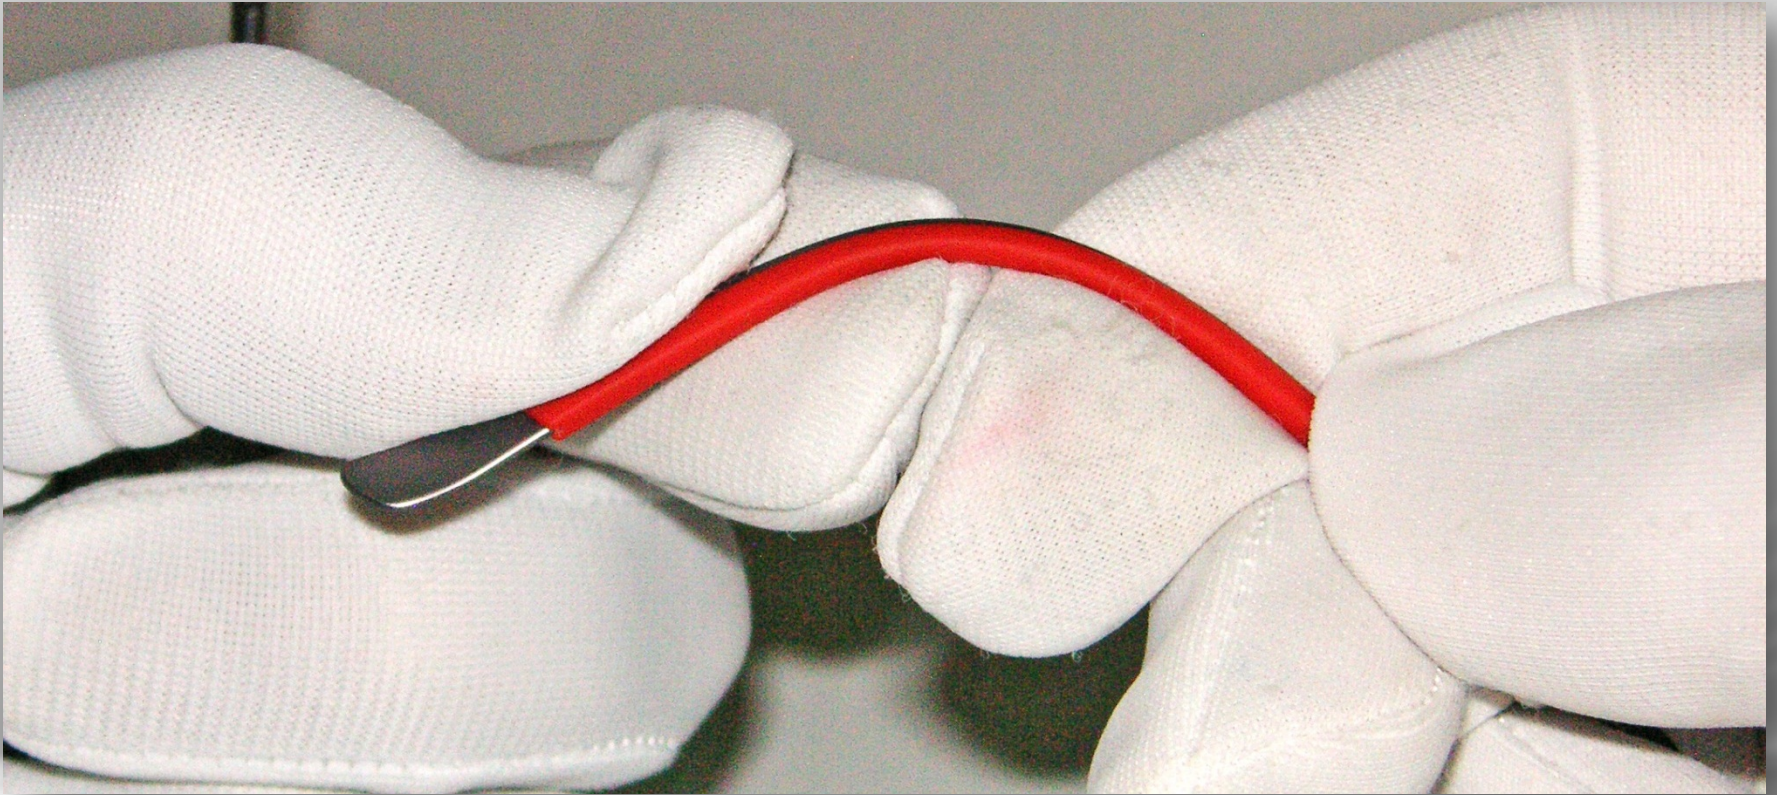

- Curve temple end in large movements to adjust behind the ear.
- Do not over bend.