









TITAN ACCENT

Glazing | Titan Accent

Optimal Rx lens Base 5
and Silhouette pliers blue and BLS 58/98/97



BLS 58 STANDARD	BLS 98 „long“	BLS 97 „short“
Standard Glazing 	for very thick lenses 	for very thin lenses 
lens size 2,0 - 6,5 mm	6 - 9,5 mm	1,3 - 3 mm
		
∅ 1,4 mm	∅ 1,4 mm	∅ 1,4 mm

Inclination | Titan Accent




1. Hold lens fixation firmly with mounting pliers
2. Open temple
3. Enclose temple edge firmly and adjust inclination at the hinge into requested direction

Temple Opening | Titan Accent




Reduce



Enlarge

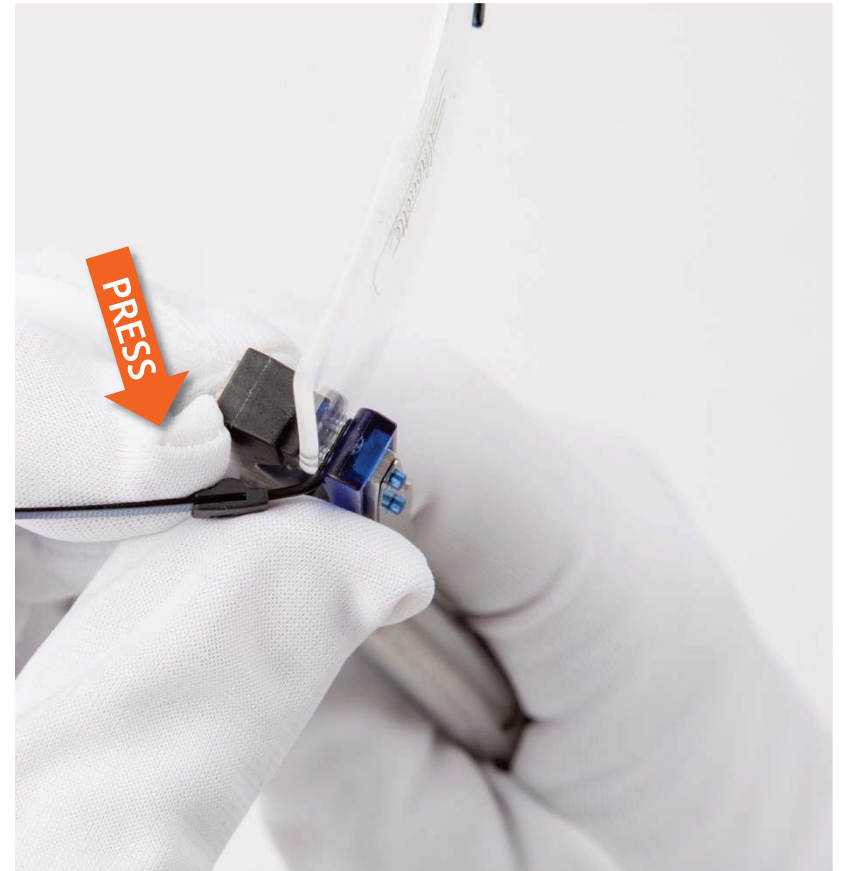

Temple disassembly | Titan Accent

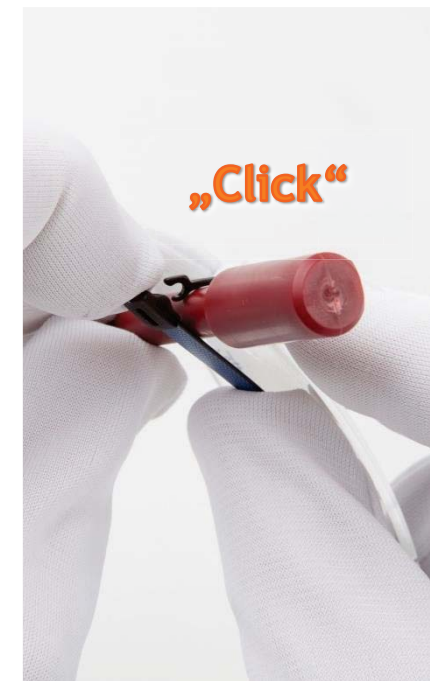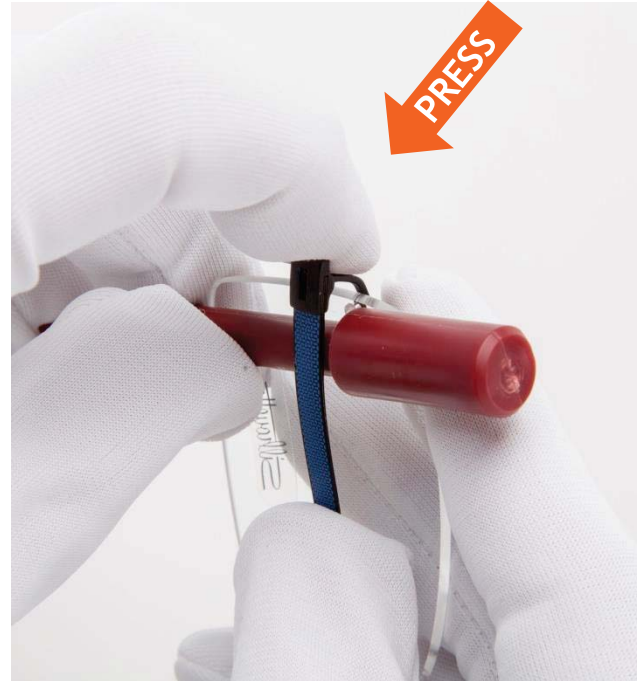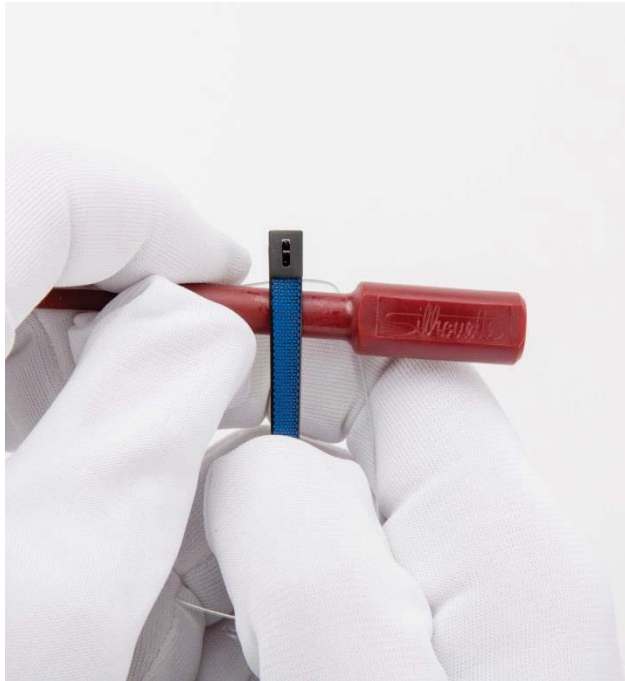


1. Place red-multi-tool at the hinge to the stop. Select suitable diameter of round part, according to distance between temple and lens.
2. Close temple and press it through behind round part.
3. Temple will get loose with a click.

Temple Assembly | Titan Accent



1. Place side part exactly at holes of SPX-temple.
2. Apply counter pressure on frame side part.
3. Press SPX-temple into hinge

Adjusting Temple End | Titan Accent

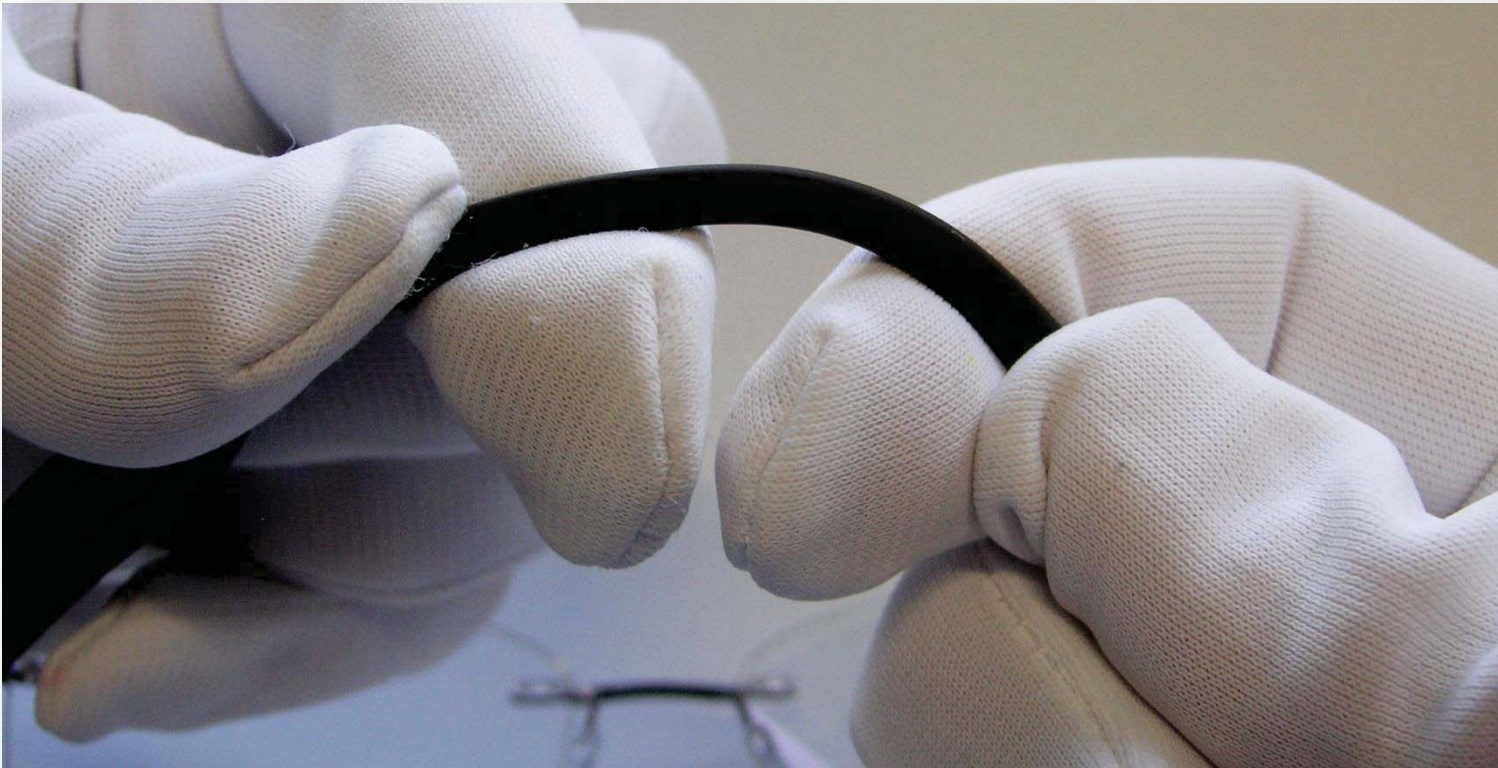

- Titanium inlay inside temple end enables “cold” adjustment.
- Curve temple in large moves.